

## How to operate the top loader washing machine

1. Fill the machine only up to 2/3 with laundry.
2. If you you want to use the dryer, do not use fabric softener.

Put your laundry in the washing machine drum. Close both flaps of the drum properly by clipping them into the correct position. **Please make sure the flaps are correctly hooked in** otherwise the machine will not work.



If the flaps are not closed in the right way they will block the washing machine drum. Only water will enter and the machine will discontinue its function. You will not be able to retrieve your clothes and you will have to wait until someone can come to open the machine manually for you.

**For this extra work you have to pay a fee of CHF 50.--**